


1. PC Interface


The ATV-25 includes ATV Tools software. This software supports uploading test data from ATV-25 test sets, managing configurations for downloading to ATV-25 test sets, and updating ATV-25 firmware. Refer the ATV Tools documentation for software operation.

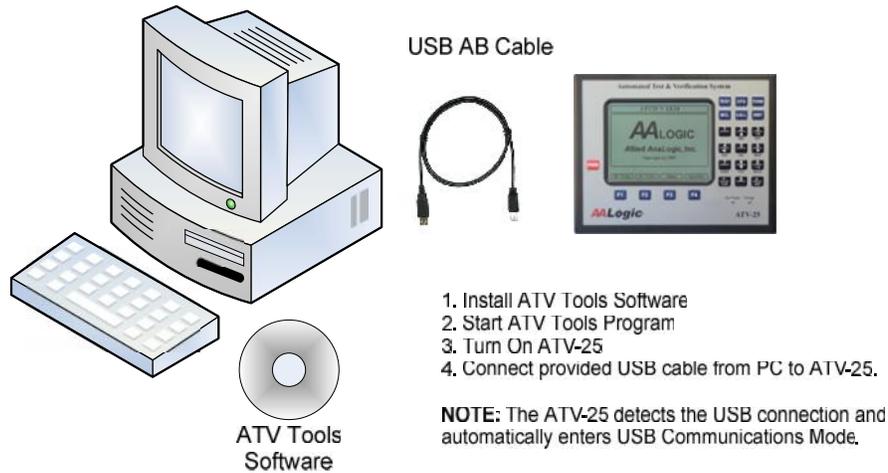

ATV-25 USB PC Interface

1.1 PC Connection Step-by-Step

- ✓ Connect one end of the provided USB connector to the PC.
- ✓ Ensure the ATV-25 is turned on and the idle screen displayed.
- ✓ Connect the provided USB Cable to the USB port on the left side of the ATV-25.

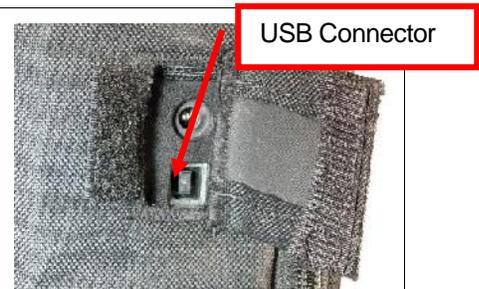

The ATV-25 automatically detects the USB connection and enters the USB Remote mode.

They ATV Tools program can now be started to communicate to the ATV-25.

ⓘ The ATV-25 can be at any state when the USB connection is completed. The ATV-25 will terminate the current activity and enter the USB mode.



Disconnect the USB cable to exit the USB Remote mode. The ATV-25 will restart and return to the <Idle> screen.

More than one ATV-25 can be managed without stopping the ATV Tools program. Just unplug the current ATV-25, ensure the next ATV-25 is on, and plug the USB cord in.

