

DTC-100



Introduction

The DTC-100 is a programmable controller for antenna rotators. It can interface with a variety of Yaesu, HyGain, and other brand rotators that use 24Vdc or 24Vac motors. The user interface is a full color 5" touch screen display. Antenna rotation can be controlled with a single touch of the LCD, or via standard protocol RS232 (TTL) from various computer programs.

Power-up Screen

Upon initially applying power a "Sign-On" screen will appear. This screen displays version number for both the display and primary control processor. The user has the option to configure "CFG" the system, or continue to the main user screen.




Rear Panel Connections

DTC-100 uses a standard IEC 320 connector block with fuse. A 6 foot 110VAC cord is included with all US shipments.

A pluggable terminal block on the rear panel allows connections for either Yaesu or HyGain rotators. A mating connector has been supplied to facilitate wiring. Be sure to follow the Connection diagram before proceeding. *Optional Terminal Block Adapter cables are available for those not wishing to cut the connector off existing cable.*

Connections to programs such as PST Rotator and HRD are made using an optional USB to RS232TTL adapter (FTDI chip). This generic adapter can be purchased directly from AALogic, or other supply vendors.


- USB-A to 3.5mm audio plug, TXD Tip, RXD Ring, Sleeve GND

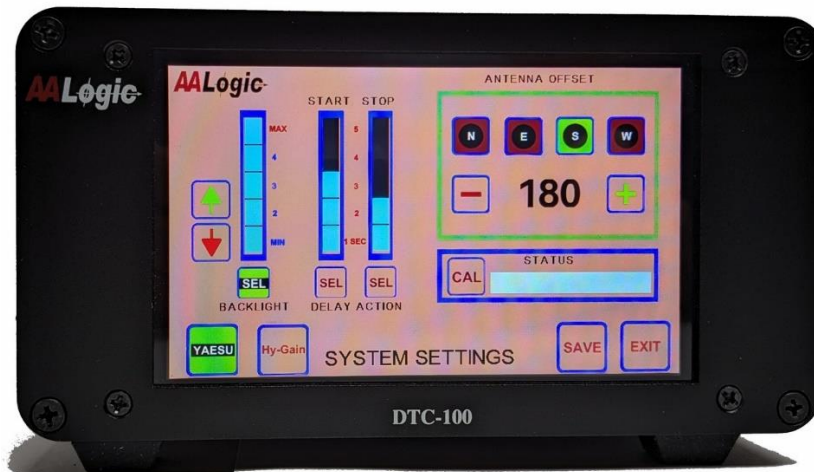


Configuration

The configuration mode allows the user to specify screen illumination and rotator specific settings as well as perform an Automatic calibration.

- LCD Screen Brightness
 - Press “SEL” below the vertical bar graph, then UP/DWN arrows to set desired brightness
- Start/Stop Delay Time
 - Pressing “SEL” below each will determine which will be adjusted with the UP/DWN arrows.
 - The definition of these bar graphs are determined by the Antenna Rotator Type selected.
 - Yaesu – ramp UP time to full speed, ramp DWN interval before stop
 - HyGain – brake release before rotation start, and brake activation after rotation stop
- Rotator Type
 - Yaesu (24Vdc motors, G-450, G-800, and G-1000)
 - HyGain(24Vac motors, HAM IV, T2X, and most other CDE models)
- Antenna Offset
 - Rotator installation is normally done at either North or South. Once the rotator has been installed on the tower the rotator is turned 180 degrees from full CounterClockWise and the Antenna set to the corresponding direction. This allows rotation on either side of the pointed direction. As an example, a HyGain installation might set “N” as the offset so as to obtain rotation of +/-180 degrees with the mechanical stops at South.
 - N/E/W/S – Antenna orientation at CCW mechanical stop
 - (+) / (-) – Incremental offset from the “stop” direction allows minor error correction from fixed N/E/W/S selection.
- CAL
 - The “CAL” button will initiate a full CCW, then full CW rotation of the rotator (CCW/CW to mechanical stop). This process measures the motor potentiometer sensor and corrects for discrepancies between models. The highlighted “CYAN” area reports the progress during this procedure.
 - If the calibration was successful the user is instructed to press “SAVE” to store these into non-volatile memory (only performed during initial setup). It should be noted that once calibrated, the user has the option to change the “offset” without performing a complete calibration again. Set the new offset and press “SAVE” will only update that setting.

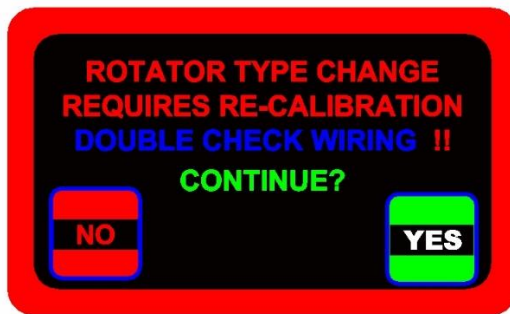

- Rotator Type POP-UP window
 - This screen is a warning which is only visible when trying to change rotator types. This reminds the user to double check wiring and confirm motor type before proceeding. Selecting the incorrect setting could possible damage your rotator. DO NOT EXIT or SAVE settings on CFG screen unless certain of rotator type and correct connections.

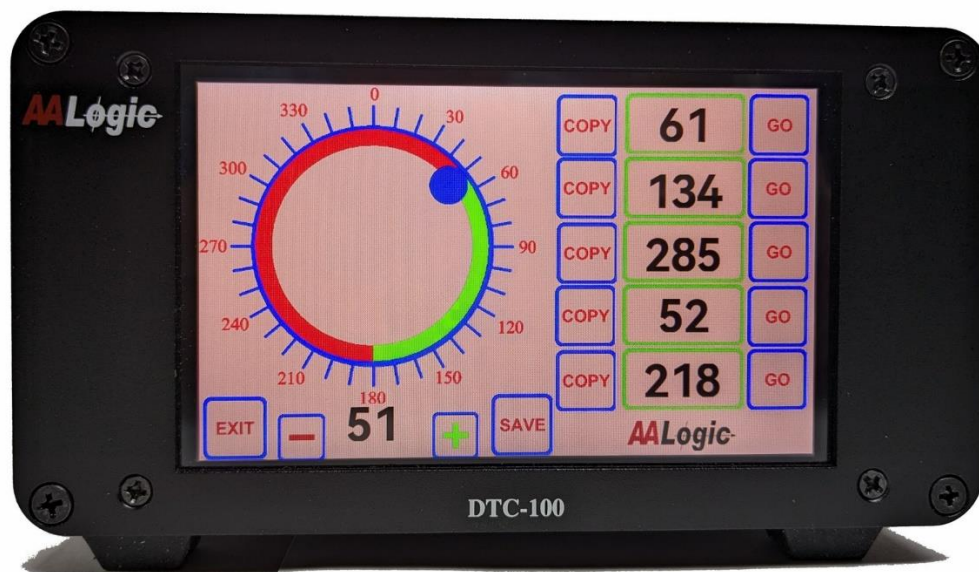


Memory

The 5 memory slots can be accessed by pressing the "MEM" button on the main screen.


- Left Circular Dial
 - Analog Indicator for desired antenna azimuth.
 - Touching the steering DOT will allow coarse setting of azimuth
 - (+)/(-) buttons can be used for fine adjust.
- Large numeric indication of desired memory input
- COPY - Copies azimuth indication into associated memory location.
- SAVE - saves all memory slots in non-volatile memory
- EXIT - Exits **without** saving in permanent memory

Main User Screen

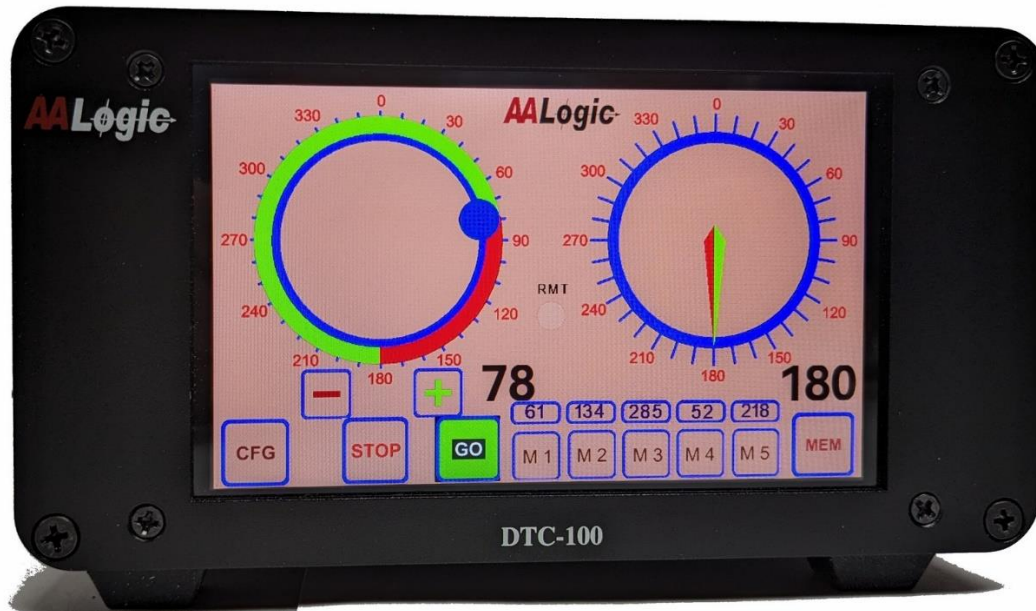

- Left Circular Dial
 - Analog Indicator for desired antenna azimuth.
 - Touching the steering DOT will allow coarse setting of azimuth
 - (+)/(-) buttons can be used for fine adjust.
 - Large numeric indicator desired azimuth
- GO
 - Activates the rotator and begins rotation. Start delay as set per CFG screen.
- STOP
 - Begins the halt sequence as set on CFG screen.
- CFG
 - Shortcut to the configuration screen.
- MEM
 - Shortcut to memory setup screen
- Memory Keys
 - Shortcut to preset memory location as defined on the memory setup screen
 - Numeric indications show memorized settings
 - Single touch action. Automatically starts rotation.
- Right Side Circular Dial
 - Analog indication of Antenna position.
 - Numeric display of Antenna Azimuth
- RMT Indicator
 - Illuminated during rotation initiated by PC command

REAR PANEL TERMINAL BLOCK

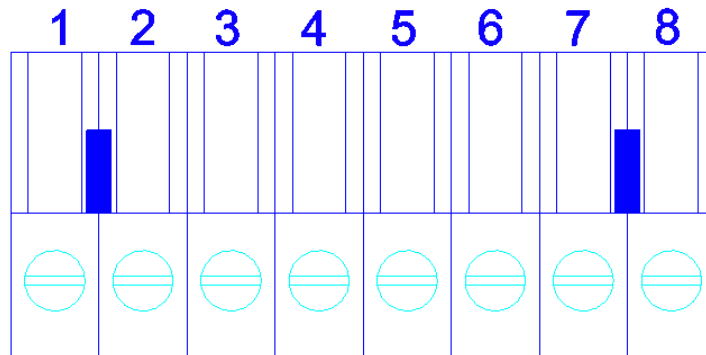

YAESU:

- 1.) NC
- 2.) NC
- 3.) Motor, Yaesu, Pin 4
- 4.) Motor, Yaesu, Pin 5
- 5.) NC
- 6.) NC
- 7.) Potentiometer, wiper pin 2
- 8.) Potentiometer, GND pin 3

HyGain

- 1.) Brake
- 2.) Motor, CCW
- 3.) Motor, CW
- 4.) Motor, Return (COM)
- 5.) Left Motor (CAP_A)
- 6.) Right Motor (CAP_B)
- 7.) Potentiometer (VSRC)
- 8.) NC (RTN)

Warranty

The DTC-100 is warranted against defects in materials and workmanship for a period of one year from the date of purchase. Contact your local sales representative or the manufacturer for a Return Authorization (RA) number and instructions on returning the product for service. Products cannot be processed unless accompanied by an RA number.

The user is responsible for determining the applicability of the product for any application. The manufacturer is not responsible for any damages, direct or consequential, resulting from the use of its products. Damages due to impact or normal wear are excluded.

The manufacturer will determine, exclusively at its own discretion, where repairs or replacement of the product is required for any warranty claim. In no case will the liability of the manufacturer exceed the original purchase price of the product.